

P91.60-2567-09

Illustrated on model 463 as of 01.07.02

Driver's airbag unit

2 Bolt

Lock tab

Multifunction steering wheel connector

Squib electrical connector

R12/13 R12/14 Squib 1 Squib 2

XX	Remove, Install		
⚠ Danger!	Risk of injury when carrying out test or repair work on airbag or belt tensioner units	Store airbag unit with expulsion area on top, do not subject to temperatures above 100 °C. Interrupt power supply when working on such units.	AS91.00-Z-0001-01A
⚠ Danger!	Risk of explosion from electrolytic gas. Risk of poisoning and irritation if battery acid is swallowed. Risk of injury through burns to skin and eyes from battery acid or when handling damaged lead-acid batteries	No fire, sparks, naked flames or smoking. Wear acid-resistant gloves, clothing and eye protection. Pour battery electrolyte only into suitable and appropriately marked containers.	AS54.10-Z-0001-01A
(1)	Notes on battery	All models	AH54.10-P-0001-01A
(3)	Important instructions for performing repair, body work and welding on vehicles with airbag and emergency belt tensioner units		AH91.00-P-0002-01M
(3)	Assessment of airbag and belt tensioner units in accident vehicles		AH91.00-P-0006-01B
i	Legal provisions concerning handling and storage of airbag and emergency tensioning retractor units		AH91.00-P-0004-01A
1	Position steering wheel adjustment towards rea		
2.1	Activate service mode in the TELE AID emergency call system	Models 463.243/ 244/ 245/ 247/ 248/ 250/ 254/ 309/ 322/ 323/ 332/ 333 with code ET2: TELE AID car telephone emergency call system.	AR82.95-P-0005-03GR
i	Notes on TELE AID emergency call system	Models 463.243244/ 245/ 247/ 248/ 250/ 254/ 309 / 322/ 323/ 332/ 333 with code ET2: Tele Aid car phone emergency call system	AH82.95-P-0001-01GA
3	Connect quiescent current retention unit		AR54.10-P-1030-07I
			*WH58.30-Z-1005-09A
4	Disconnect ground cable of battery	i Installation: Encode radio, set clock, normalize power windows and set clock for stationary heater. i for model 203. i For model 463 except 463.248 with code 979. i For model 463.248 with code 979.	AR54.10-P-0003P AR54.10-P-0003G AR54.10-P-0003PM

5	Unscrew screw (2)	i Only for MODEL 203"	*BA91.60-P-1001-01A
		Nm Screw for airbag to steering wheel	
		8	*126589001000
		i Only on model 463"	*BA91.60-P-1001-01B
		Nm Bolt for airbag to steering wheel	
		3	*000589011000
6.1	Lift airbag unit (1) and release electrical connectors (3, 4), disconnect	i Only for MODEL 203	
6.2	Lift airbag unit (1), disconnect electrical connector for multifunction steering wheel (5) and connector for squib of driver airbag (R12/13	i Only on model 463 up to 30.06.02	
6.3	Lift driver airbag unit (1), unclip lock tabs (3)	i Only model 463 as of 01.07.02	
	and disconnect electrical connectors (5) of squib 1(R12/13) and squib 2 (R12/14).	i Installation: The electrical connectors (5)	
	Disconnect multifunction steering wheel electrical connector (4)	must audibly engage on insertion.	
7	Remove airbag unit (1).	i If the airbag unit (1) is replaced, the	
⊯ os	Notes regarding the disposal of airbag and belt tensioner units	defective unit must be disposed of properly:	OS91.00-P-0001-01A
		Make airbag units unusable.	AR91.60-P-0611A
8	Install in the reverse order		
9.1	Deactivate service mode in TELE AID emergency call system	Models 463.243/ 244/ 245/ 247/ 248/ 250/ 254/ 309/ 322/ 323/ 332/ 333 with code ET2: TELE AID - car telephone emergency call system.	AR82.95-P-0005-03GR
10	Read out fault memory	STAR DIAGNOSIS Stored faults which can result from cables being disconnected or from simulation during installation or test work have to be processed and erased in the diagnostic trouble code memories after completing the work.	
₩AD	Connect STAR diagnosis tool, read out DTC		AD00.00-P-2000-04A
	memory, erase		*WE58.40-Z-1013-06A

Nm Airbag

Number	Designation	Model 203
BA91.60-P-1001-01A	Screw for airbag to steering wheel Nm	8

Nm Airbag

Number	Designation	Model 463 up to 31.11.00	Model 463 as of 1.12.00
BA91.60-P-1001-01B	Screw for airbag to steering wheel Nr	6	8