


AR72.10-P-1800-05G	Prepare installation for power window guide rail on front door	
 BT	Power window guide rail modified	BT72.10-P-1500-01G


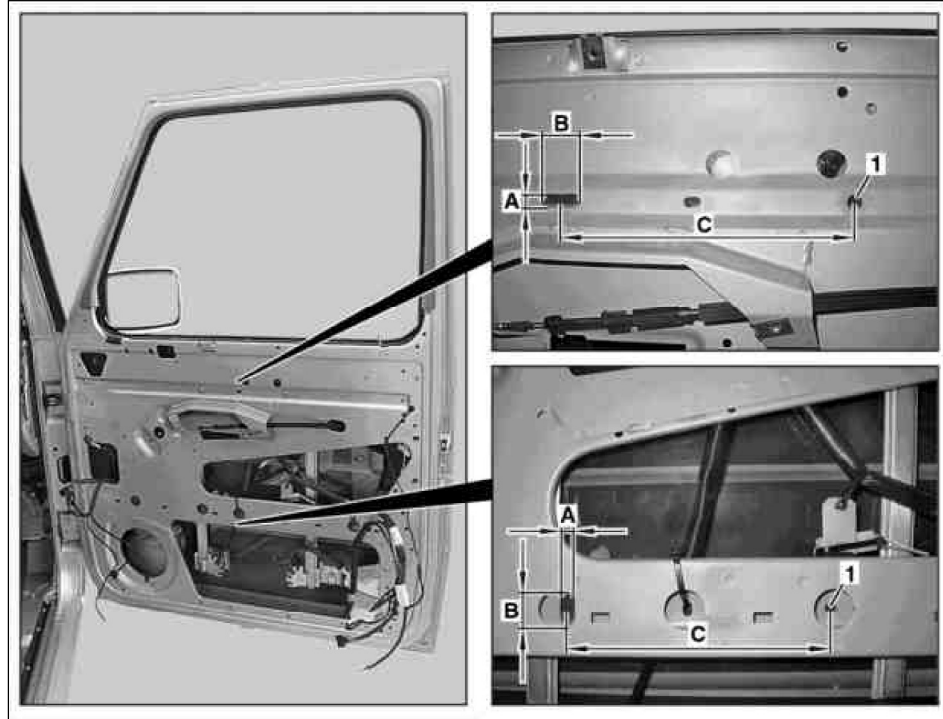

- 1 Drill two oblong holes for mounting second power window guide rail on front door.
 If necessary, shorten bit to prevent bit going through and damaging exterior door surface.


Illustration shows new version of power window with two guide rails.


- 1 Hole for mounting old version of power window guide rail
- A Core diameter for oblong hole (7 mm)
- B Length of oblong hole (12 mm)
- C Interval (205 mm)



P72.10-3129-06

-  Fasten second power window guide rail on both holes for mounting old version of power window guide rail (1).

- 2 Remove lift bracket (2) from side window
 Carefully remove lift bracket (2) to prevent breaking side window

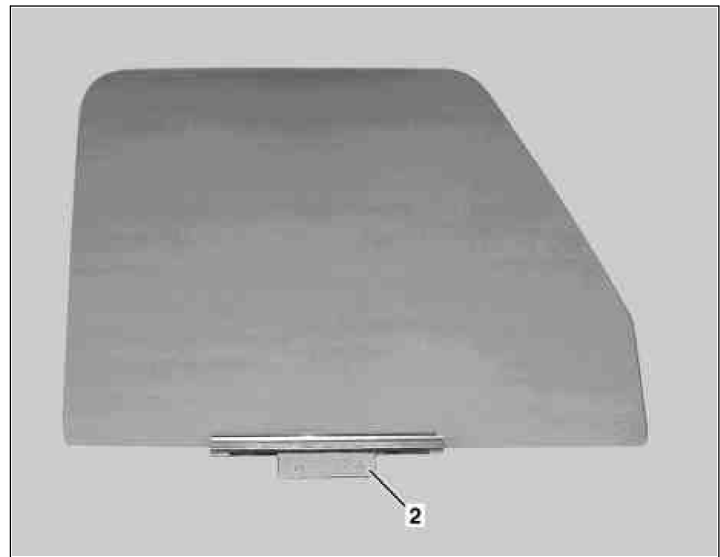

P72.10-3128-11